

# Manual Valve Body Reverse (Rear) Servo Kit


D92-MK



## Instructions:

1. Remove OE return spring retainer and piston cushion spring. (see right)
2. Place piston apply rod blocker shim on piston apply rod.
3. Assemble reverse (rear) servo as shown below.

\*Stock piston apply rod and return spring retainer snap ring are reused.\*

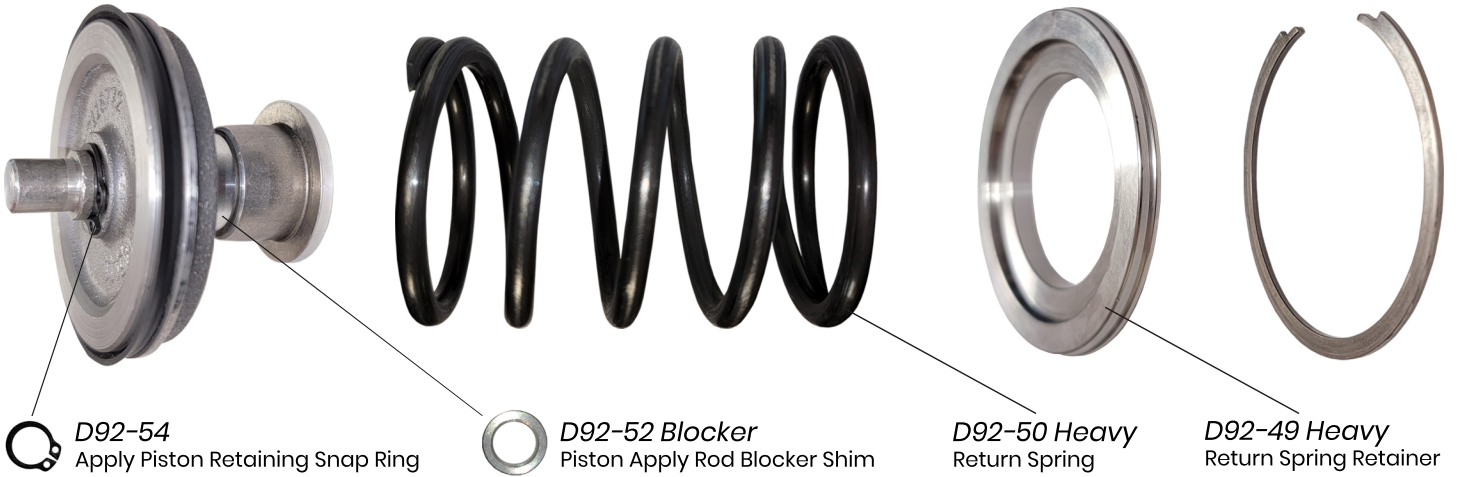

# Manual Valve Body Reverse (Rear) Servo Kit

D92-MK



## Instructions:

1. Remove OE return spring retainer and piston cushion spring. (see right)
2. Place piston apply rod blocker shim on piston apply rod.
3. Assemble reverse (rear) servo as shown below.

\*Stock piston apply rod and return spring retainer snap ring are reused.\*

