





Torque Converter Lock-Up Apply Regulator Valve Body

Instruction Manual

Install valve, spring, and retainer as shown. Be sure the valve moves freely in bore. Use a cover plate with hole smaller than .080".

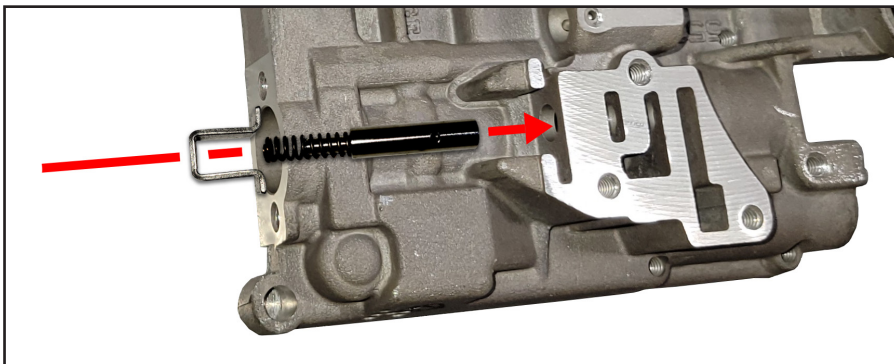

Place two .250" checkballs into the cavity of the lower valve housing. Use a small amount of trans gel for easy assembly.

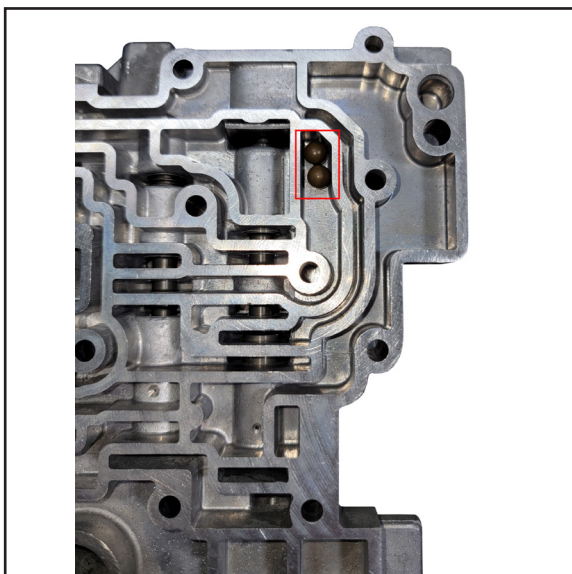

Use a 22-AR separator plate.

