

K1 Apply Boost Valve Kit


Part No.

122740-29K

- Valve
- Sleeve

NOTE: Also fits A466ND.

Aisin Seiki AS66RC, AS69RC; Nissan RE6R01A

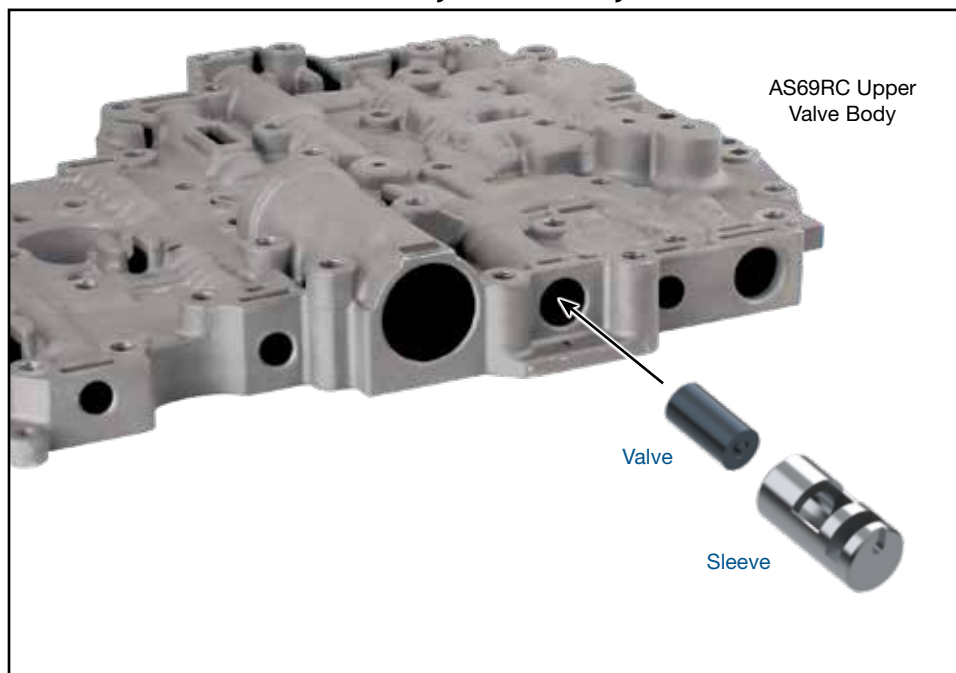

1. Disassembly

- Remove OE retainer and save for reuse.
- Remove and discard OE boost valve and sleeve assembly.
- Remove OE large diameter spring, small diameter spring, and valve. Save for reuse.

2. Installation & Assembly

- Be certain all debris has been removed from the valve bore and valve body.
- Reinstall OE valve, small diameter spring and large diameter spring.
- Install Sonnax boost valve and sleeve assembly.
- Reinstall OE retaining clip.

3. Final Testing

Vacuum testing at the port(s) indicated holds the recommended minimum 18 in.-Hg.

