

## Lockup Boost Valve Kit


**Part No.**

**122740-30K**

- Valve
- Sleeve

**NOTE:** Also fits A466ND.

## Aisin Seiki AS66RC, AS69RC; Nissan RE6R01A

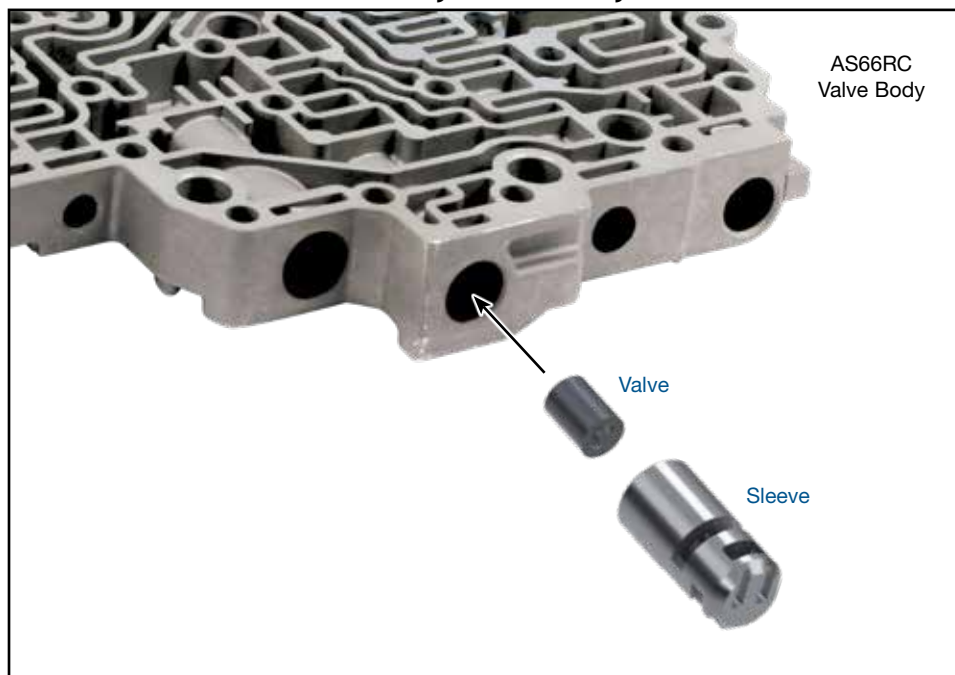

### 1. Disassembly

- Remove OE retainer and save for reuse.
- Remove and discard OE boost valve and sleeve assembly.
- Remove OE spring and valve. Save for reuse.

### 2. Installation & Assembly

- Be certain all debris has been removed from the valve bore and valve body.
- Install OE valve and spring.
- Install Sonnax boost valve and boost sleeve assembly.
- Reinstall OE retaining clip.

### 3. Final Testing

Vacuum testing at the port(s) indicated holds the recommended minimum 18 in.-Hg.

